


SECTION 412-04: Control Components  
REMOVAL AND INSTALLATION

1998 Mark VIII Workshop Manual


## Blower Motor Speed Control

### Removal

1. Remove the RH instrument panel insulator (046A24).
  1. Remove the screws.
  2. Disconnect the courtesy lamp.
  3. Remove the instrument panel insulator.

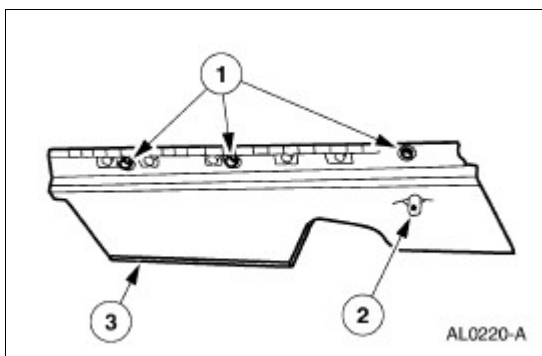

2. Remove the A/C blower motor speed control (19E624).
  1. Remove the screws.
  2. Disconnect the wire harness connectors.
  3. Remove the A/C blower motor speed control.

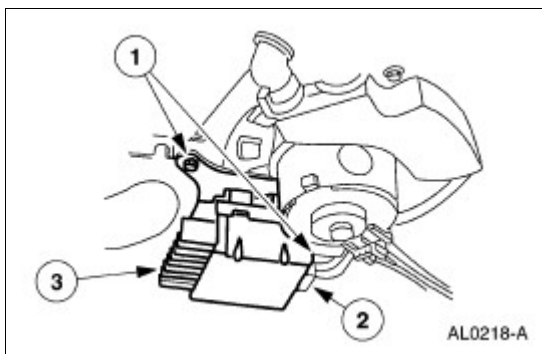

### Installation

1. Follow the removal procedure in reverse order.

